


Owners Manual

Model #ABS1014-01P
(Purple)

the **AbsBench™** **X3**

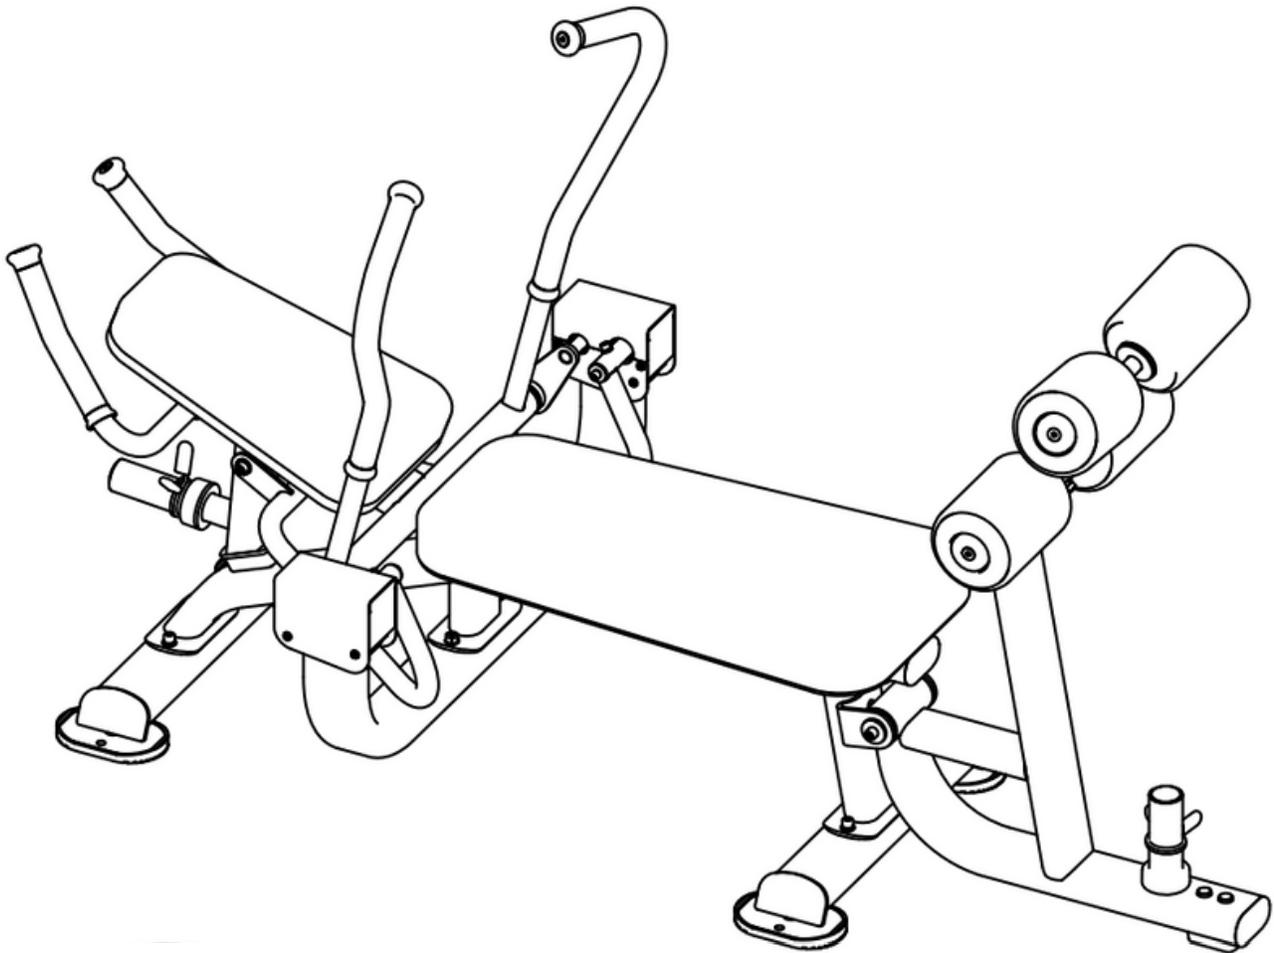

We Change Lives from the Core®

Warranty information inside



TABLE OF CONTENTS

Important Safety Instructions.....	pg. 03
Instructions.....	pg. 04
Parts List.....	pg. 05
Exploded View.....	pg. 06
Hardware Kit.....	pg. 07
Measurement Guide.....	pg. 09
Assembly Instruction.....	pg. 10
Assembly.....	pg. 11
General Maintenance Schedule.....	pg. 17
General Maintenance Information.....	pg. 18
Training Tips.....	pg. 19
Warranty.....	pg. 20



CAUTION Read all precautions and instructions in the manual before using this equipment.

IMPORTANT SAFETY INSTRUCTIONS



Before beginning any fitness program, you should obtain a complete physical examination from your physician. When using exercise equipment, basic precautions should always be taken, including the following:

1. Read all instructions before using the equipment. These instructions are written to ensure your safety and to protect the unit.
2. Use the equipment only for its intended purpose as described in this guide. Do not use accessory attachments that are not recommended by the manufacturer, as such attachments might cause injuries.
3. The product should only be used on a level surface and with 0.5 meters space around the product. Do not store the equipment outdoors.
4. The equipment is not intended for use by children under the age of 16. Children over the age of 16 should use the equipment with adult supervision.
5. Do not overexert yourself or work to exhaustion. Do not attempt to lift more weight than you can control safely. If you feel any pain or abnormal symptoms, stop your workout immediately and consult your physician.
6. This equipment is not intended to be used as or with medical apparatus/instruments.
7. Never operate the unit when it has been dropped or damaged. Never drop or insert anything into any opening in the equipment. Always check the unit and its cables before each use. Make sure that all fasteners and cables are secure and in good working condition. Frayed or worn cables can be dangerous and may cause injury. Periodically check these cables for any indication of wear. Keep hands, limbs, loose clothing and long hair well out of the way of moving parts.
8. Be careful when getting on or off the equipment.
9. Wear proper exercise clothing and shoes for your workout, no loose clothing.

Personal Safety During Assembly

Read each step in the assembly instructions and follow the steps in sequence. Do not skip ahead. If you skip ahead, you may learn later that you have to disassemble components and that you may have damaged the equipment.

Assemble and operate the equipment on a solid, level surface. Locate the unit a few feet from walls or furniture to provide easy access. The equipment is designed for your enjoyment, and by following these precautions, we believe you will enjoy your new equipment and the many benefits it will provide.



INSTRUCTIONS

Before beginning assembly, please take the time to read instructions thoroughly. Please use the various lists in this manual to make sure that all parts have been included in your shipment. If parts are found to be missing, please contact either your authorized dealer or us directly and reference the part name and number from the parts list. Use only our replacement part when servicing. Failure to do so will void your warranty and could result in personal injury.

The equipment is designed to provide the smoothest, most effective exercise motion possible. After assembly, you should check all functions to ensure correct operation. If you experience problems, first recheck the assembly instructions to locate any possible errors made during assembly. If you are unable to correct the problem, call your authorized dealer or contact us directly to continue troubleshooting. Be sure to have the serial number, related part names and numbers and your manual handy when calling. Do not continue assembly, or use the equipment until all parts have been accounted for and troubleshooting is complete.

Tools Required



Ratchet Wrench and Socket




Adjustable Wrench



Rubber Mallet



Hex Key Wrench set

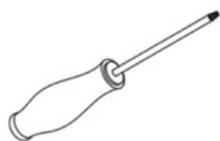

Phillips Screwdriver

PARTS LIST




NOTE: SOME OF THESE PARTS MAY COME PRE-INSTALLED

Item No.	Description	Qty	Item No.	Description	Qty
1	Seated Frame ASSY	1	36	M6*12 Hexagon Socket Pan Head Bolt	12
2	Support Frame ASSY	1	37	φ6.6*φ12*1.6 Flat Washer	12
3	Handle Frame ASSY	1	38	φ9*φ16*1.6 Flat Washer	6
4	Back Pad Frame ASSY	1	39	φ11*φ20*2 Flat Washer	27
5	Linkage frame	1	40	φ13*φ24*2.5 Flat Washer	2
6	Fixed Handle Frame ASSY	1	41	Φ8 Spring Washer	8
7	Swivel Frame ASSY	2	42	φ10 Spring Washer	11
8	Support Frame	1	43	φ12 Spring Washer	2
9	Head Pad	1	44	M10 Nylon Lock Nut	9
10	Right Shroud	1	45	M12 Nylon Lock Nut	1
11	Left Shroud	1	46	φ9*φ28*2 Flat Washer	6
12	Shroud Inner Plate	2	47	φ13*φ26*2 Flat Washer	2
13	φ20*139.5 Rotation Shaft	2	48	Small Casing	2
14	Leg Curl Frame ASSY	1	49	φ28*φ21*5.5 Flat Washer	2
15	Base Frame	2	50	Hex Key S=4	1
16	Fixed Foam Mount ASSY	1	51	Hex Key S=6	1
17	φ25*φ10.5*133 Rotation Shaft	1	52	Hex Key S=8	1
18	Foam Mount Tube	1	53	Hex Key S=10	1
19	Foot Foam Pad	4			
20	Back Pad	1			
21	Olympic Weight Clip	2			
22	φ60 Plastic Ring	4			
23	φ56 Aluminum End Cap	4			
24	φ10.5*φ30*2.5 Flat Washer	2			
25	M8*20 Socket Head Cap Bolt	8			
26	M8*35 Socket Head Cap Bolt	4			
27	M10*25 Socket Head Cap Bolt	9			
28	M10*60 Socket Head Cap Bolt	2			
29	M10*65 Socket Head Cap Bolt	2			
30	M10*70 Socket Head Cap Bolt	4			
31	M10*130 Socket Head Cap Bolt	2			
32	M10*155 Socket Head Cap Bolt	1			
33	M12*35 Socket Head Cap Bolt	2			
34	M12*105 Socket Head Cap Bolt	1			
35	M10*40*40 Flat Head Cap Bolt	4			




EXPLODED VIEW

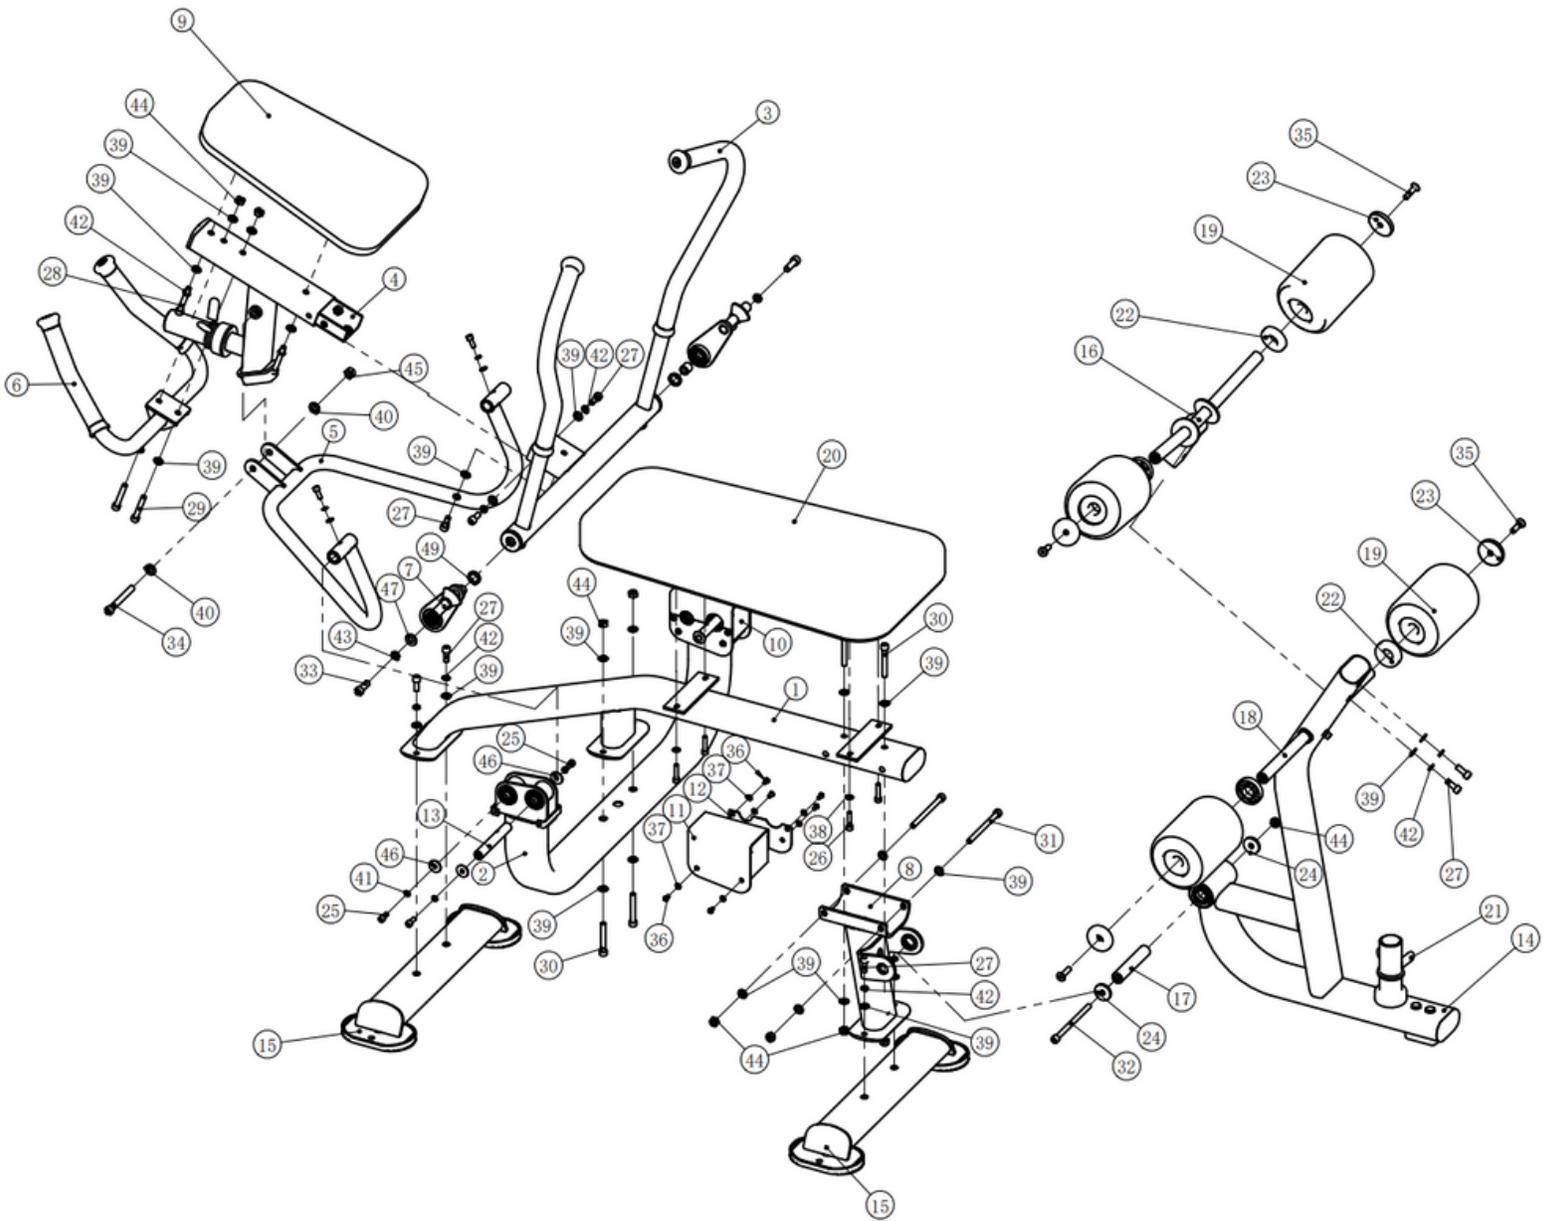

HARDWARE KIT




#27:Socket Head Cap Screw M10*25 (9PCS)
Hex Key S=8(1PC)

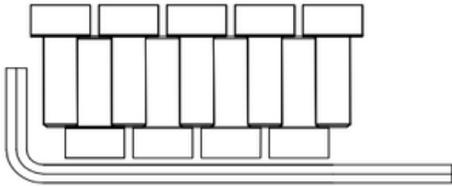


#28:Socket Head Cap Screw M10*60 (2PCS)




#29:Socket Head Cap Screw M10*65 (2PCS)

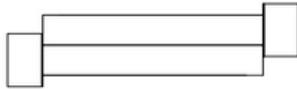


#30:Socket Head Cap Screw M10*70(4CS)

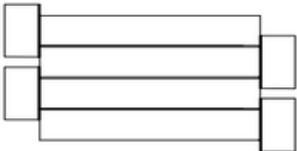

#31:Socket Head Cap Screw M10*130 (2PCS)

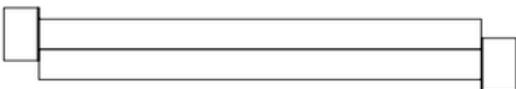

#39:Flat Washer $\phi 11*\phi 20*2$ (27PCS)

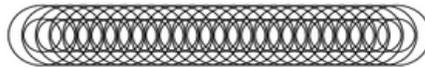

#42:Spring Washer $\phi 10$ (11PCS)




#44:Nylon Lock Nut M10(9PCS)




#32:Socket Head Cap Screw M10*155 (1PC)




#35:Flat Head Cap Screw M10*40(4PCS)

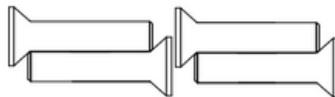


#24:Big Flat Washer $\phi 38*\phi 11*5$ (2PCS)

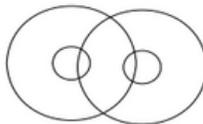


#25:Button Head Cap Screw M8*20 (8PCS)
Hex Key S=6(1PC)

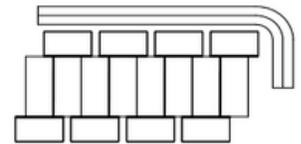

#26:Socket Head Cap Screw M8*35 (4PCS)

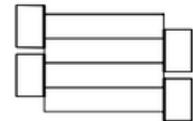


#46:Flat Washer $\phi 9*\phi 28*2$ (6PCS)

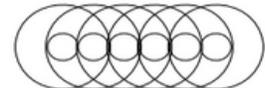

#41:Spring Washer $\phi 8$ (8PCS)



#38:Flat Washer $\phi 9*\phi 16*1.6$ (6PCS)

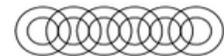


HARDWARE KIT




ABS1014-②

#22: $\phi 60$ Plastic Ring (4PCS)

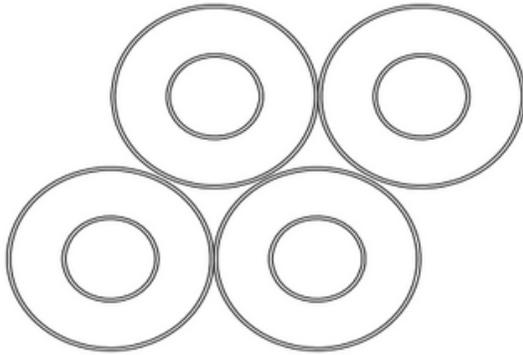


#23: Aluminium Grip Cup $\phi 60 \times 11.6$ (4PCS)

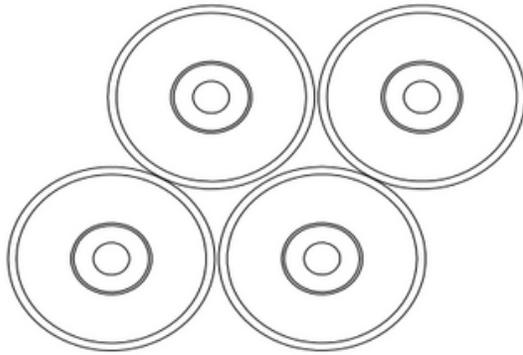


#48: Small Casing (2PCS)



#49: Flat Washer $\phi 28 \times \phi 21 \times 4$ (2PCS)

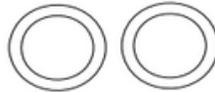

#36: Button Head Cap Screw M6*12 (12PCS)
Hex Key S=4 (1PC)

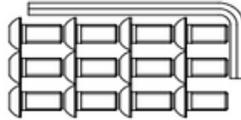

#37: Flat Washer $\phi 6.6 \times \phi 12 \times 1.6$ (12PCS)




#43: Spring Washer $\phi 12$ (2PCS)




#45: Nylon Lock Nut M12 (1PC)




#40: Flat Washer $\phi 13 \times \phi 24 \times 2.5$ (2PCS)

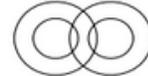

#47: Flat Washer $\phi 13 \times \phi 26 \times 2$ (2PCS)

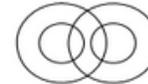


#33: Socket Head Cap Screw M12*35 (2PCS)

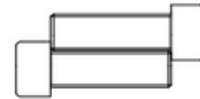


#34: Socket Head Cap Screw M12*105 (1PC)
Hex Key S=10 (1PC)




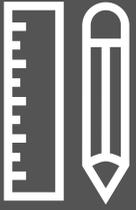


MEASUREMENT GUIDE

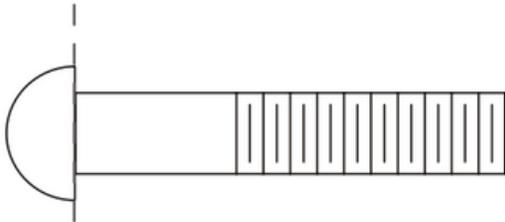


BHCB = Button Head Cap Bolt

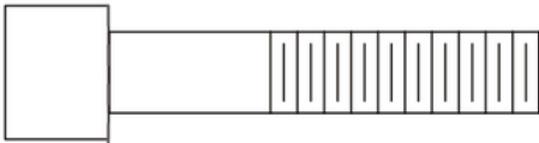


SHCB = Socket Head Cap Bolt

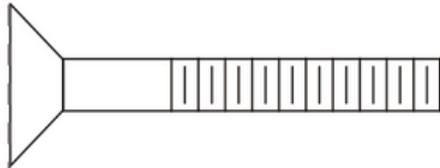

FHCB = Flat Head Cap Bolt

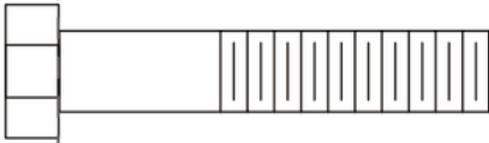

HHB = Hex Head Bolt

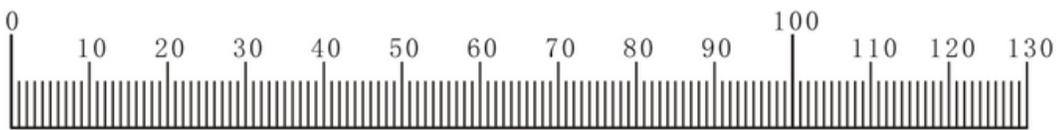

Millimeters



Inches

Diameter of bolt (mm/inch)	M6(1/4")	M8(5/16")	M10(3/8")	M12(1/2")	M16(5/8")
Tightening torque (N.m)	9~12	22~30	45~59	78~104	193~257
Operational methods for an adult	The strength of the wrist	The strength of the wrist and forearm	The strength of the entire arm	The strength of the arm and upper body	with all strength

ASSEMBLY INSTRUCTIONS




Assembly of the equipment takes professional installers about 1.5 hours. If this is the first time you have assembled this type of equipment, plan to spend more time. If you are in doubt about any part of this assembly, we recommend you contact a professional installer to complete the assembly. You may find it quicker, safer, and easier to assemble this equipment with the help of an assistant, as some components may be large, heavy or awkward to handle alone. It is important that you assemble your product in a clean, clear, uncluttered area. This will enable you to move around the product while you are fitting components and reduce the possibility of injury during assembly or damage to the area or equipment.



Note

As with any assembled part, proper alignment and adjustment is critical. While tightening the fasteners, be sure to leave room for adjustments. Do not fully tighten the fasteners until instructed to do so. Be careful to assemble the components in the sequence presented in this guide.

Training Area and Free Area

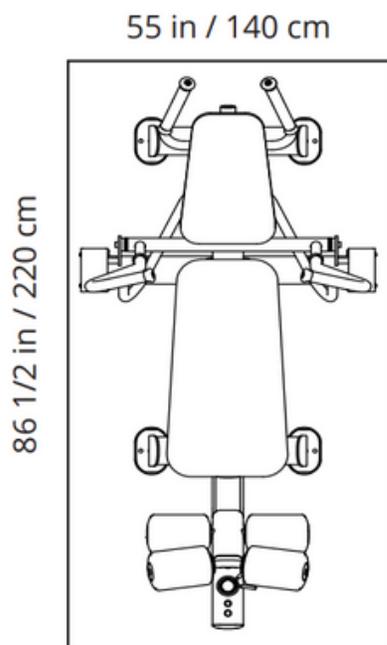

Free Area

Please allow for free area beyond the training area of 24 in / 60 cm on all sides of the unit to ensure that the training area is not impeded.

Specifications

Maximum Wt. Capacity: 220 lbs / 100 kg

Maximum User Weight: 330 lbs / 150 kg

Product Total Surface: 78.3*36.8 in / 199*93.5 cm



ASSEMBLY

STEP 1


1. Attach 1 Base Frame (#15) to the Seated Frame ASSY (#1) using:

- two M10*25 Socket Head Cap Bolts (#27)
- two $\Phi 10$ Spring Washers (#42)
- two $\Phi 11*\Phi 20*2$ Flat Washers (#39)

2. Attach 1 Base Frame (#15) to the Support Frame (#8) using:

- two M10*25 Socket Head Cap Bolts (#27)
- two $\Phi 10$ Spring Washers (#42)
- two $\Phi 11*\phi 20*2$ Flat Washers (#39)

Note: Tighten all connections from Step 1.

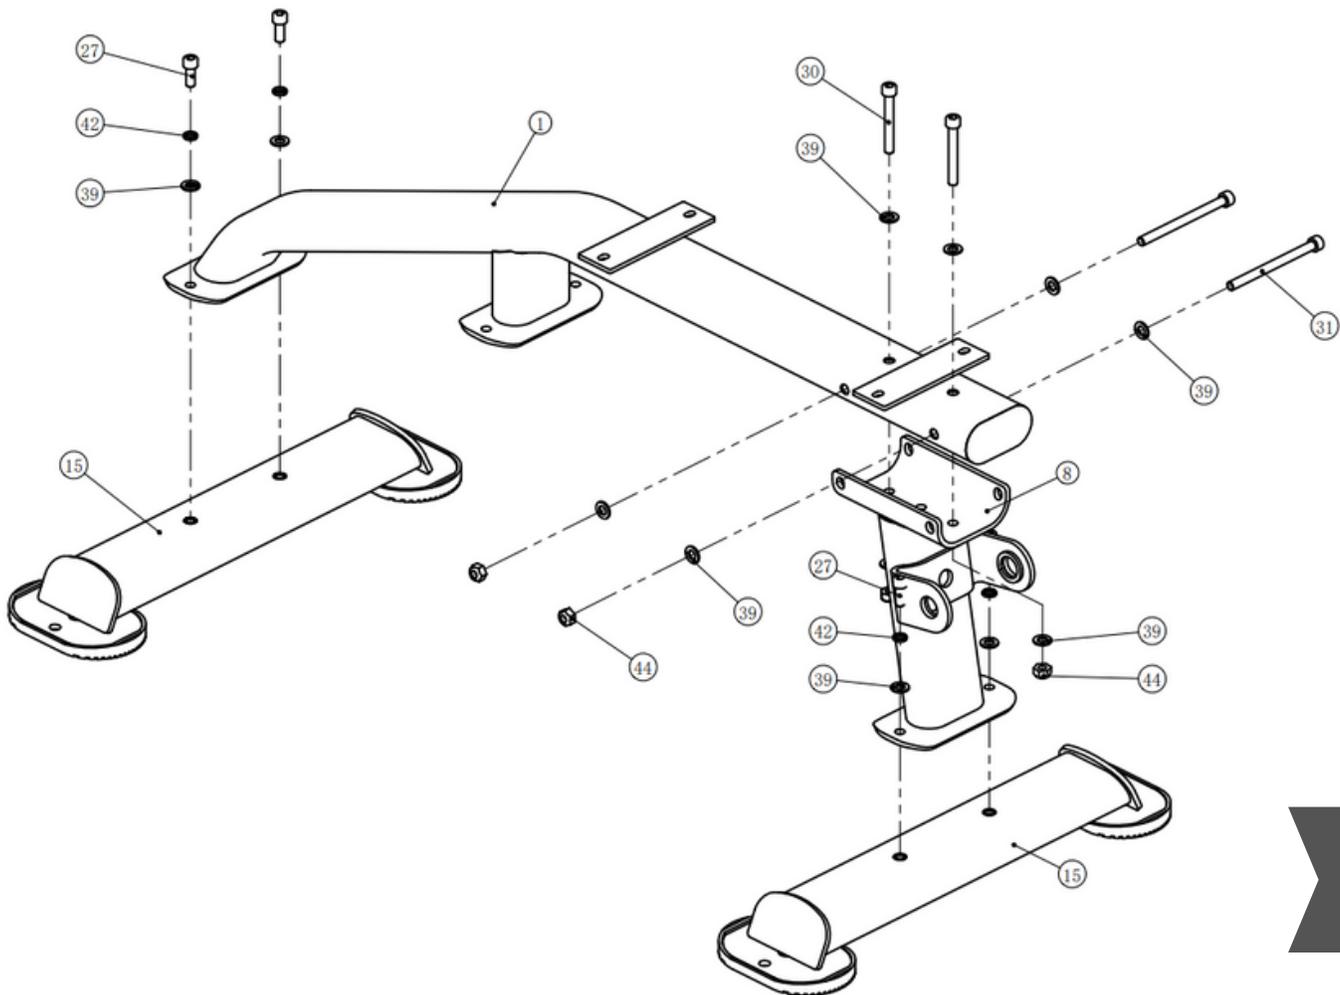



STEP 2

1. Attach the Support Frame ASSY (#2) to the Seated Frame ASSY (#1) using:

- two M10*70 Socket Head Cap Bolts (#30)
- four $\Phi 11*\Phi 20*2$ Flat Washers (#39)
- two M10 Nylon Lock Nuts (#44)


2. Inserting one side of the Linkage frame (#5) into the Support Frame ASSY (#2) and secure the other side using:

- two M8*20 Socket Head Cap Bolts (#25)
- two $\Phi 9*\Phi 28*2$ Flat Washers (#46)
- two $\Phi 8$ Spring Washers (#41)
- one $\Phi 20*139.5$ Rotation Shaft (#13)

3. Secure the Linkage frame ASSY (#5) and secure the other side using:

- one M8*20 Socket Head Cap Screw (#25)
- one $\Phi 8$ Spring Washer (#41)
- one $\Phi 9*\Phi 16*1.6$ Flat Washer (#38)

Note: Tighten all connections from Step 2.

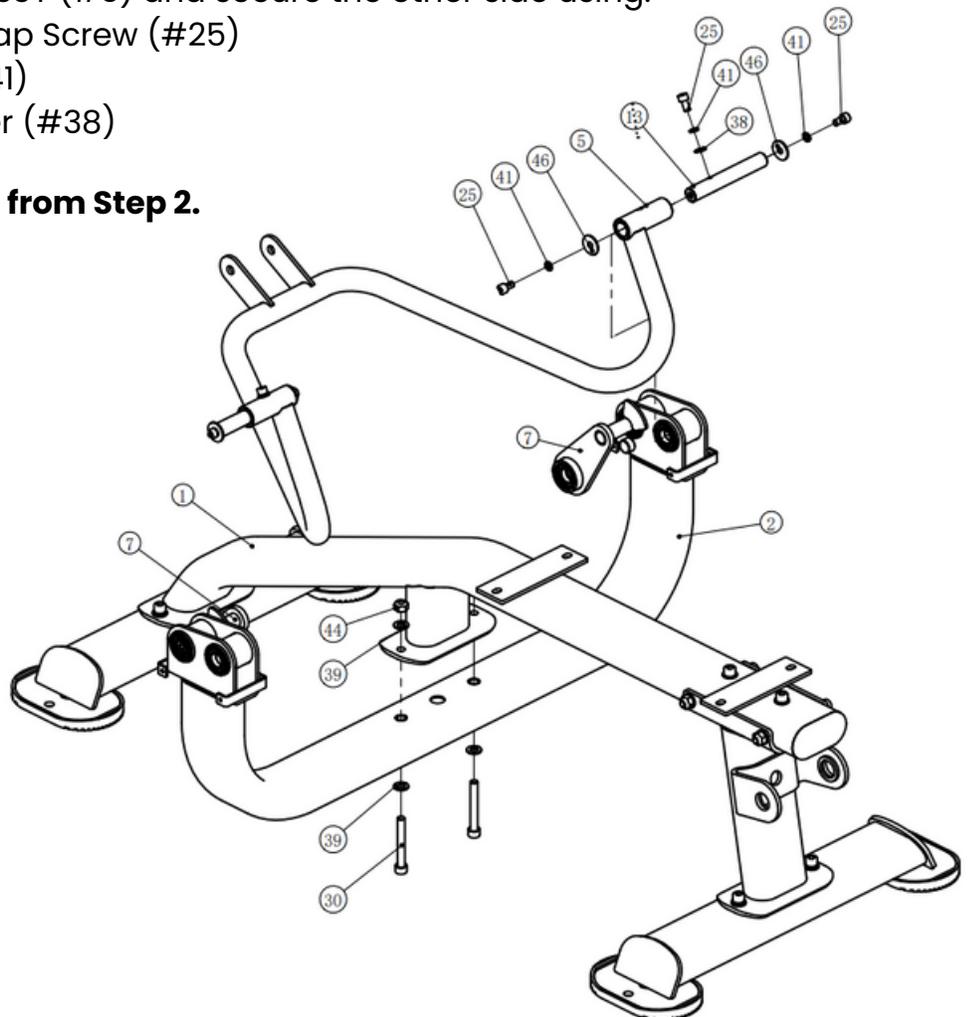




ASSEMBLY

STEP 3

1. Attach the Handle Frame ASSY (#3) to the Back Pad Frame ASSY (#4) using:
 - three M10*25 Socket Head Cap Bolts (#27)
 - three $\phi 10$ Spring Washers (#42)
 - three $\phi 11 \times \phi 20 \times 2$ Flat Washers (#39)
2. Attach the Fixed Handle Frame ASSY (#6) to the Back Pad Frame ASSY (#4) using:
 - two M10*65 Socket Head Cap Bolts (#29)
 - four $\phi 11 \times \phi 20 \times 2$ Flat Washers (#39)
 - two M10 Nylon Lock Nuts (#44)
3. Connect the the Handle Frame (#3) to the Connection Frame (#2) using:
 - two $\phi 28 \times \phi 21 \times 5.5$ Flat Washers (#49)
 - two Small Casings (#48)
 - two Swivel Frame ASSY (#7)
 - two $\phi 13 \times \phi 26 \times 2$ Flat Washers (#47)
 - two M12*35 Socket Head Cap Bolts (#33)
 - two $\phi 9 \times \phi 28 \times 2$ Flat Washers (#46)
 - two $\phi 8$ Spring Washers (#41)
 - two M8*20 Socket Head Cap Bolts (#25)
 - two $\phi 12$ Spring Washers (#43)

Note: Tighten all connections from Step 3.

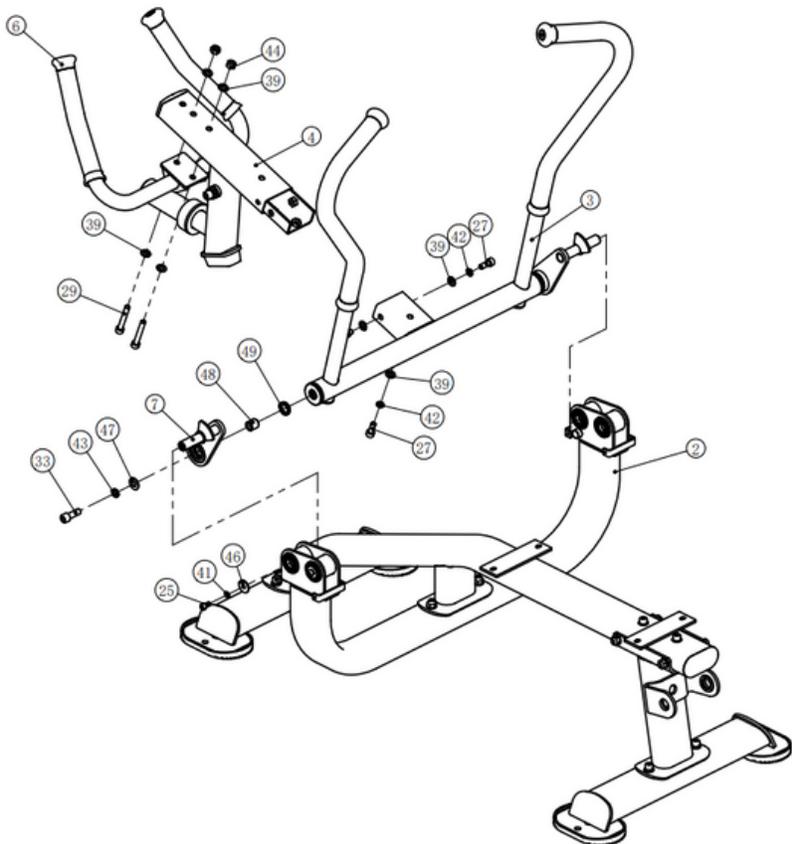




STEP 4

1. Attach the Head Pad Frame ASSY (#4) to the Connection Frame ASSY (#5) using:
 - one M12*105 Socket Head Cap Screw (#34)
 - two $\phi 13*\phi 24*2.5$ Flat Washers (#40)
 - one M12 Nylon Lock Nut (#45)
2. Attach the Right Shroud (#10) & Left Shroud (#11) over the tops of the Support Frame ASSY (#2) using:
 - four M6*12 Hexagon Socket Pan Head Bolts (#36)
 - four $\phi 6.6*\phi 12*1.6$ Flat Washers (#37)
3. Attach both Shroud Inner Plates (#12) to the Support Frame ASSY (#2) using:
 - eight M6*12 Hexagon Socket Pan Head Bolts (#36)
 - eight $\phi 6.6*\phi 12*1.6$ Flat Washers (#37)

Note: Tighten all connections from Step 4.

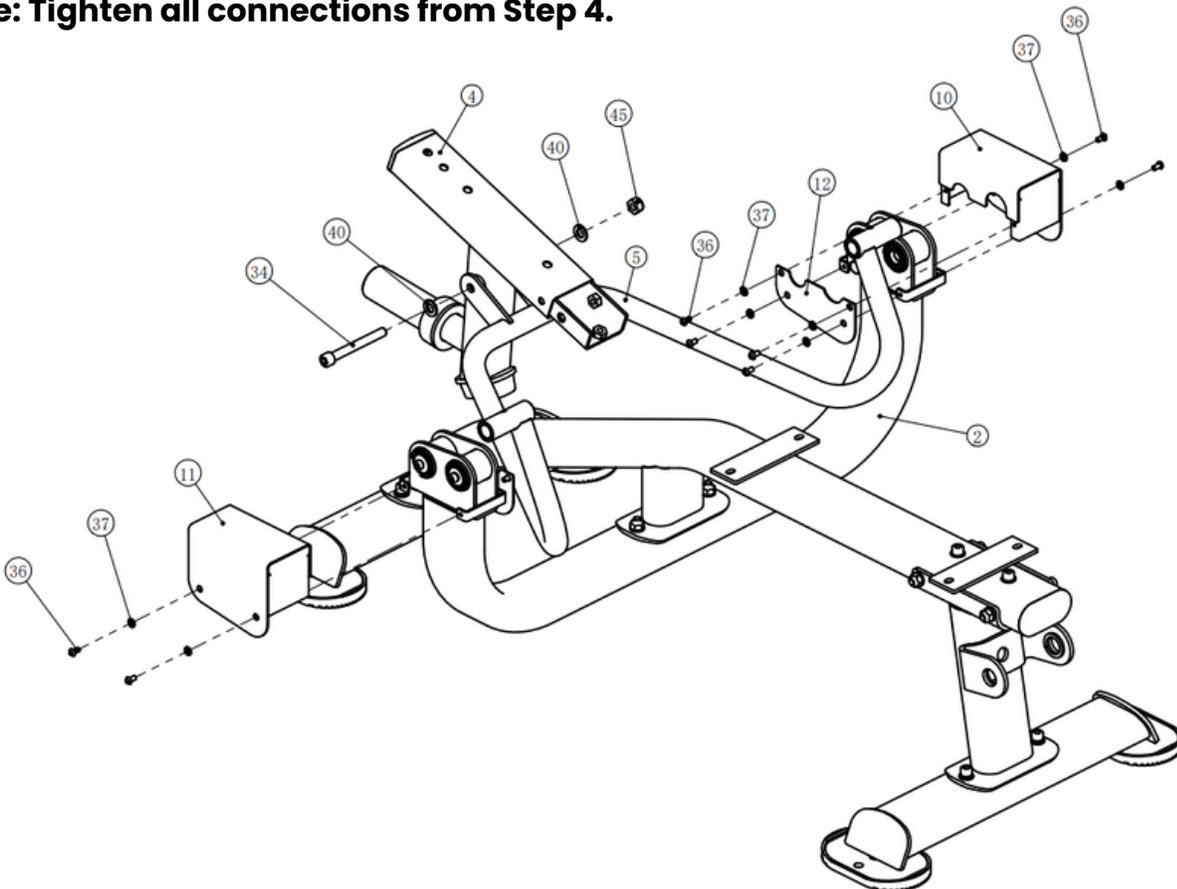



ASSEMBLY

STEP 5


1. Attach the Head Pad (#9) & Back Pad (#20) to the Seated Frame ASSY (#1) using:

- four M8*35 Socket Head Cap Bolts (#26)
- four $\Phi 9 \times \Phi 16 \times 1.6$ Flat Washers (#38)
- two M10*60 Socket Head Cap Bolts (#28)
- two $\Phi 11 \times \Phi 20 \times 2$ Flat Washers (#39)
- two $\Phi 10$ Spring Washers (#42)

2. Attach the Leg Curl ASSY (#14) to Support Frame (#8) using:

- one M10*155 Socket Head Cap Screw (#32)
- two $\Phi 10.5 \times \Phi 30 \times 2.5$ Flat Washers (#24)
- one $\Phi 25 \times \Phi 10.5 \times 133$ Rotation Shaft (#17)
- one M10 Nylon Lock Nut (#44)

3. Attach the Foam Mount Tube (#18) by sliding it through the hole in the Leg Curl Frame ASSY (#14) and secure using one M8*25 Socket Head Cap Bolt tightening only after the entire unit is assembled.

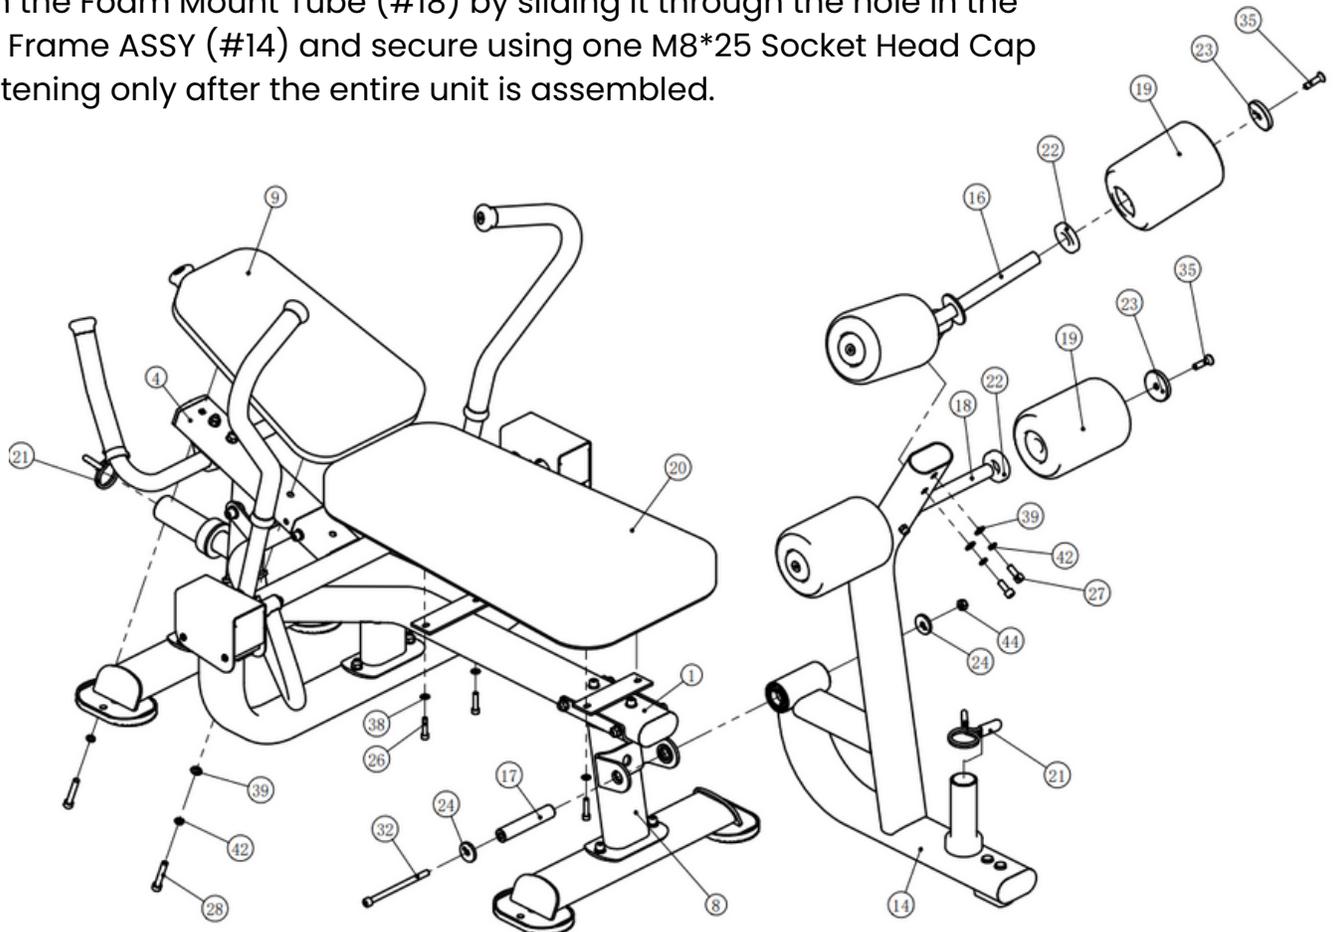



ASSEMBLY

● STEP 5 (CONT.)

4. Attach the Fixed Foam Mount ASSY (#16) to the Leg Curl Frame ASSY (#14) using:

- two M10*25 Socket Head Cap Bolts (#27)
- two Φ 10 Spring Washers (#42)
- two Φ 11* Φ 20*2 Flat Washers (#39)

5. Fit each side of each Foam Mount Tube (#18) & (#16) with the four Foot Foam Pads (#19) from inside to outside using:

- four Φ 60 Plastic Ring (#22)
- four Foot Foam Pads (#19)
- four Φ 56 Aluminum End Cap (#23)
- four M10*40*40 Flat Head Cap Bolts (#35)

6. Attach Olympic Weight Clips (#21) to the the two weight posts.

Note: Tighten all connections from Step 5. Machine is now ready to be moved into place and can be used safely.



GENERAL MAINTENANCE SCHEDULE

ROUTINE	COMMERCIAL MAINTENANCE	HOME MAINTENANCE	LATEST DATE ENTRY					
Inspect; Links, Pull Pins, Snap Locks, Swivels, Weight Stack Pins	DAILY	WEEKLY						
Clean; Upholstery	DAILY	WEEKLY						
Inspect; Cables or Belts and their tension	DAILY	WEEKLY						
Inspect; Accessory Bars, and Handles	WEEKLY	3 MONTHS						
Inspect; All Decals	WEEKLY	3 MONTHS						
Inspect; All Nuts and Bolts, Tighten if needed	WEEKLY	3 MONTHS						
Inspect; Anti-Skid Surface	WEEKLY	3 MONTHS						
Clean & Lubricate; Guide Rods with a Teflon (PTFE) based lubricant (Superlube)	MONTHLY	3 MONTHS						
Lubricate; Seat Sleeves, Turcite Bushings, Linear Bearing	MONTHLY	3 MONTHS						
Clean and Wax; All Glossy Finishes	6 MONTHS	YEARLY						
Repack with Grease; Linear Bearings	6 MONTHS	YEARLY						
Replace; Cables, Belts and Connecting Parts	YEARLY	3 YEARS						

A fitness facility should have a regular maintenance schedule in place that this equipment can be added into. For personal, in home use, please follow the home maintenance schedule listed above.

GENERAL MAINTENANCE INFORMATION



Links, Pull-Pins, Snap Hooks, Swivels, Weight Stack Pins:

- Check all pieces for signs of visible wear or damage.
- Check springs in snap hooks and pull-pins for proper tension and alignment.
- If the spring sticks or has lost its rigidity, replace it immediately.

Upholstery:

- To ensure prolonged upholstery life and proper hygiene, all upholstered pads should be wiped down with a damp cloth after every workout.
- Periodically take the time to use a mild soap or an approved vinyl upholstery cleaner to deter the onset of cracking or drying. Avoid using any abrasive cleaners or cleaners not intended for use on vinyl.
- Replace ripped or worn upholstery immediately.
- Keep sharp or pointed objects clear of all upholstery.

Decals:

- Inspect and familiarize yourself with any safety warnings or other user information posted on each unit.

Nuts and Bolts:

- Inspect all nuts and bolts for any loosening and tighten if needed.
- Go through a re-tightening sequence periodically to ensure that all hardware is tensioned properly.

Anti-Skid Surfaces:

- These surfaces are designed to supply secure footing and need to be replaced if they appear worn or become slippery.

Belts and Cables:

- Visually inspect the belts and cables for fraying, cracking, peeling, or discoloration.
- While the machine is not in use, carefully run your fingers along the belt or cable to feel for thinning or bulging areas.
- Replace belts and cables immediately at the first signs of damage or wear. Do not use equipment until belts or cables have been replaced.

Belt and Cable Tension:

- Referring to the Owners Manual, when belts or cables are used check all bolts attachments to be sure they are properly attached.
- Check slack in cables and re-adjust cable tension if needed.

Seat Sleeves, Guide Rods:

- Before applying lubricant, wipe down applicable parts with a dust free rag.
- Lubricate seat sleeves and Guide Rods with a Silicon or Teflon based lubricant spray.

Linear Bearings:

- Referring to the Owners Manual carefully disassemble the bearing from its housing and place a finger full of light grease (lithium, super lube, etc.) into the inside of the bearing. Using your finger, press the grease into the ball-bearings and their tracks. Repeat until the ball-bearing tracks are full of grease. Insert the shaft back into the bearing and wipe off excess grease.



TRAINING TIPS

Use this manual to guide you through the basic exercises you can perform on your equipment. To gain maximum results and avoid possible injury, consult a fitness professional to develop your complete exercise program.

Always consult your physician before starting any exercise program.

To be successful in your exercise program, it is important to develop an understanding of the basic principles of strength training. Now that you have your equipment, it is only natural that you want to get started immediately. First, determine a set of realistic goals and objectives for yourself. By deciding on an exercise plan that is right for you prior to starting, you will contribute significantly to your success.

Warm up properly before engaging in weight resistance training. Stretching, yoga, jogging, calisthenics or other cardiovascular exercise can help prepare your body for the heavier workload of lifting weights.

Learn how to perform the exercise correctly before using heavy weight. Correct form is important to avoid injury and to ensure that you work the proper muscle groups.

Know your limitations. If you are new to weight training or are embarking on an exercise regimen after a long layoff, start slowly and build foundational strength over a longer period of time.

Pay attention to your breathing. Exhale when you exert is a general rule of thumb. Never hold your breath.

the AbsBench™ **X3**

Manufacturer's Limited Warranty

The manufacturer warrants that **The AbsBench™ X3** is free of defect in materials and workmanship and will, at its option, repair or replace any defective with **The AbsBench™ X3** that is returned to it. Except as described in the following sentence, all parts and components of **The AbsBench™ X3** are warranted from the original date of purchase as below:

Frame - 3 years
Padding & Grips - 90 days
All Other Parts - 1 year

This warranty is valid only in accordance with the condition set forth below:

1. Normal wear and tear (including lost parts) are not covered by this warranty.
2. The warranty extends only to the original consumer purchaser and is not transferable. In addition, proof of purchase must be demonstrated. This warranty is void if the product has been subject to accident, misuse, abuse, improper maintenance or repair or unauthorized modification.
3. This limited warranty is the only written or express warranty given by the manufacturer. Any implied warranty of merchantability of fitness for a particular purpose on this product is limited in duration to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.
4. Repair or replacement of the product (or, if repair or replacement is not feasible, a refund of the purchase price) is the exclusive remedy of the consumer under this warranty. The manufacturer reserves the right to remedy any warranty claims via parts and repair prior to replacement. The manufacturer shall not be liable for any incidental or consequential damages for breach of this warranty or any implied warranty on this product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.
5. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Procedure for Warranty Repairs or Replacement:

If warranty service is necessary, the original purchaser must either call or email for instructions.

Proof of Purchase will be required for all warranty claims.

Our phone number is: (866) 219-5335 x0 (outside the U.S. 1-908-879-2713 x0)

www.theabscompany.com

info@theabscompany.com

the AbsBench™ **X3**

Thank you for purchasing the AbsBench™ Elite. Our customer service staff is ready to help and to answer any questions. Our phone number is: (866) 219-5335 x-0
Parts@TheAbsCompany.com

Please call us if you have any questions.
Customer service staff can be reached
Monday to Friday from 9:00 AM to 5:00 PM Eastern Standard Time.

You can also send us an email, or visit our website
for additional customer service information.

Prior to calling or emailing, please have the following information ready:

- Customer Name and Address
 - Telephone Number
 - Proof of Purchase
- Product Model Number
 - Serial Number



We Change Lives from the Core®

The Abs Company, 8429 Lorraine Rd, Lakewood Ranch, FL 34202
1-866-219-5335 - www.TheAbsCompany.com
© 2022 The Abs Company. All Rights Reserved.

Protected under US and INTERNATIONAL Patents. Patent information available upon request.