

# TROUBLESHOOTING THE ABCOASTER PS500 COUNTER

In the event that you are experiencing difficulties, with your AbCoaster counter, there are several things you can check to ensure that it is functioning properly.

## FRONT OF FACEPLATE

- **Check the battery.** The counter is run off a single AAA battery that is located on the back of the counter face plate itself. You can access this by prying the counter's circular housing out of the recess in the face plate.
- You can either pry the housing from the front of the faceplate with a credit card, or push out the housing from the back of the faceplate. (Fig 1)
- If you have to push the housing out from the backside, use the eraser end of a pencil on the back side of the faceplate through the access hole and gently press the counter upwards until you can grasp under the lip from the front. (**WARNING: Make sure to not press on the circuit board which can be seen inside the access hole**) (Fig 3)
- Once free of the faceplate, check the battery on the back of the counter unit to confirm if it needs to be replaced. (Fig 2)

FIG 1

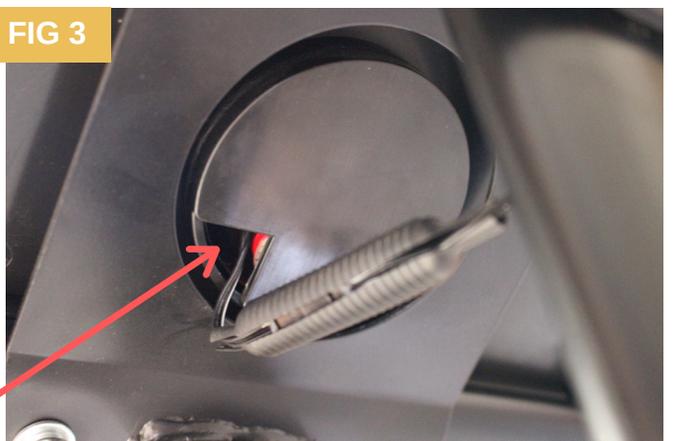


FIG 2



## BACK OF FACEPLATE

FIG 3



Access Hole

Call for details: 1-866-219-5335    Outside the US: 1-908-879-2713

[www.TheAbsCompany.com](http://www.TheAbsCompany.com)

The Abs Company, 8429 Lorraine Rd #362, Lakewood Ranch, FL 34202