


CHANGING OUT THE ABSOLO™ CARRIAGE ROLLERS

Changing out the rollers on the AbSolo™ carriage is a simple activity that can be accomplished in approximately 20 minutes.

- Begin by removing the two small bolts that hold the end plate at the back of the rail with an Allen wrench. Set these aside for the time being. (Fig 1)
- Next remove the rear rail bumpers with an Allen wrench and small crescent wrench. The black bumpers will come free with gentle pressure. (Fig 2)
- Next, actuate the locking lever and slide the carriage backwards off the rails.
- Turning the carriage over, you can now access the rollers, which can now be changed as needed. (Fig 3)
- To replace the carriage, simply reverse the steps above.

If there are questions during an install for a tech, PLEASE do not hesitate to call us and discuss! We are happy to assist and make sure that every install goes smoothly. We are happy to hop on FaceTime or Zoom and video chat to make sure things are set up correctly. Just call 866-219-5335 Option 5 and we can set up a video conference.

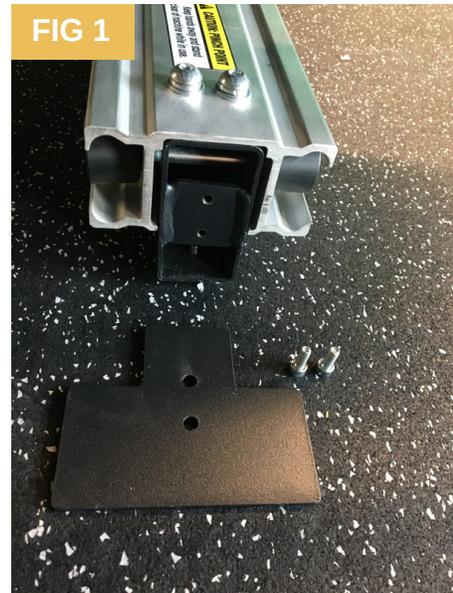

Call for details: **1-866-219-5335** Outside the US: **1-908-879-2713**

www.TheAbsCompany.com

The Abs Company, 8429 Lorraine Rd #362, Lakewood Ranch, FL 34202