




## **REPLACING THE ABSOLO BACK BUMPER (SW & ABS SERIES)**

The Back Bumper on the AbSolo is a very easy piece to change out if you are experiencing issues with it. You will need an adjustable crescent wrench and a M10 Allen Key.

Start by loosening the nut and bolt assembly from the left side of the unit. Be sure to note the orientation of the bolts and washers when you do this. (You may find it easier to do one side at a time, removing one part of the pad and attaching the new one before moving to the other side of the seat). Proceed to repeat this process on the right side. Dispose of the damaged/defective part. Reverse the process to attach the new padding. Be sure to inflate the back bumper prior to use by inserting a needle valve into the recessed fill point.

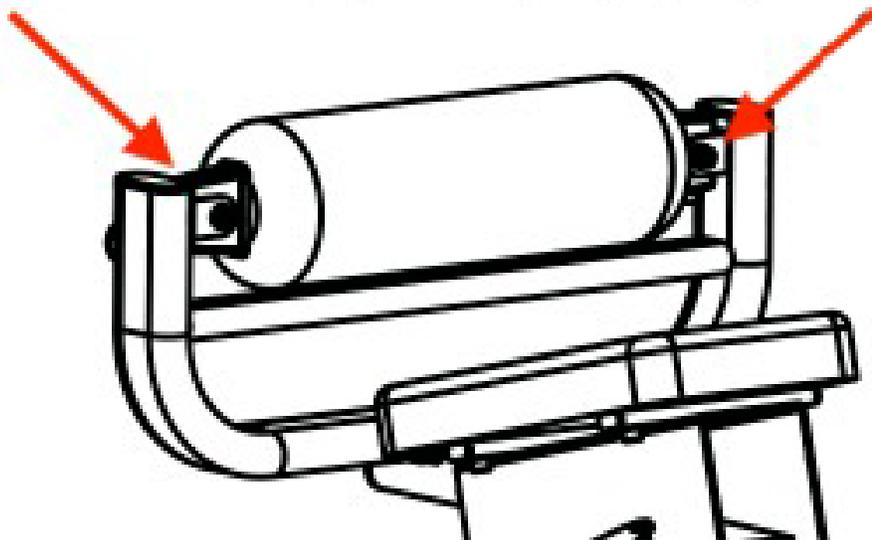

If there are questions during an install for a tech, PLEASE do not hesitate to call us and discuss! We are happy to assist and make sure that every install goes smoothly. We are happy to hop on FaceTime or Zoom and video chat to make sure things are set up correctly. Just call 866-219-5335 Option 5 and we can set up a video conference.

Call for details: **1-866-219-5335** Outside the US: **1-908-879-2713**

**[www.TheAbsCompany.com](http://www.TheAbsCompany.com)**

The Abs Company, 8429 Lorraine Rd #362 , Lakewood Ranch, FL 34202